 


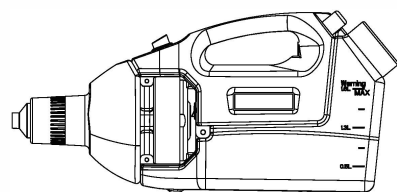


Instruction Manual 21005-SOROXFO6



Please read this instruction manual carefully before using the fogger.

 I . Product Spare Parts Description

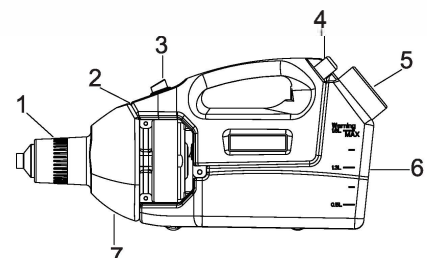

- | | | |
|-----------------------------|-----------------|----------|
| 1.Atomizer | 2.Air pipe | 3.Switch |
| 4.Waterproof interface | 5.Tank Cap | 6.Tank |
| 7.Motor box | 8.Measuring cup | |
| 9.Leakage switch power cord | 10.Nozzle | |


II . Product specifications and technical parameters

High voltage version


Rated voltage : AC 110-220V
Capacity : 1.6L
Rated power : 200W
Spray volume : 25-350ml/min(adjustable)
Droplet size : 35-80 μ m
Spraying distances : 4-5M
Product size : 408*186*117.8mm

III. The operation instruction:


1. Add the disinfectant liquid in the tank and tighten the tank cap. (Noted:Do not add more liquid than the maximum capacity of the water tank. Over filling may cause damage to the internals of the fogger).
2. Turn on the power switch of the device ,the machine begins to work (as shown below).

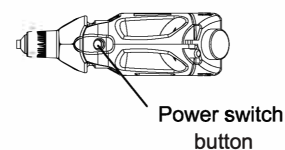

3. Do not tilt down the spray nozzle when low on liquid. Avoid accumulation of liquid in the front of the container, as tubing can not absorb the liquid.
4. Please do not tilt the device so that the liquid exceeds the warning line.

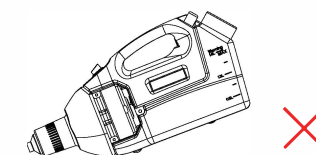

5. Tilt fogger on an upward angle and refill the liquid in the container when the liquid is less than 0.5L.

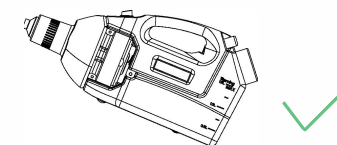

6. After use, drain tank and put some water in the tank and operate the fogger for 1-2 minutes to avoid the disinfectant liquid blocking or corroding the nozzles and pipes.

IV. Troubleshooting

Reason	Solution
<p>1. The motor does not run.</p> <p>a.Overload operation, machine suddenly stop working . b.The power line leakage switch is activated</p>	<p>A.Wait a few minutes then device will return normal B.Press the leakage switch button again</p>
<p>2. The motor runs but does not spray.</p> <p>The nozzle is blocked.</p>	<p>C.Remove the nozzle to clean.</p>

VI. Caution

1. Do not immerse in water. If unit gets wet, wait for it to dry completely before turning it on.
2. Operating ambient temperature is between 0 - 40 C
3. Do not bump or drop the unit as it will cause interior and exterior damage.
4. Running the fogger for extended periods of time may cause overheating and the fogger to shut down. Should this happen let the fogger cool.
5. Please turn off the power immediately If the following situations occur:
 - Water leaks into the internal chamber of the device
 - The pump suddenly stops
 - The pump sound changes noticeably
 - The tank is leaking water
 - The pump does not work on startup
 - Abnormal conditions during start up.
- 6.The maximum amount of added liquid cannot exceed the warning line.
7. Do not use the device in the rain.
8. Ensure your hands are dry to "plug" and "unplug" the device, and keep the device away from the flammable and explosive and high-temperature environment.

VII. Warranty and after-sales service

- (1). All devices enjoy 3 months warranty against manufacturer defects. Warranty is voided if the unit has been abused.

VII. Accessories and spare parts

Product	Specification	Quantity	Remark
Device	Host	1PC	
Filter sponge		1PC	
Nozzle	Nozzle Size	1PC	Droplet size
	0.3mm		0.3mm <35 μ m
	0.5mm		0.5mm <40 μ m
Measuring cup	100ml	1PC	
User manual		1PC	